

Täckplatta med vred för tidsströmbrytare och jalousibrytare resp. -knapp



Specifikation	Artikelnr.	FE	PS	EAN
 cremevit blank	0666 01	1/5		4010337666011
 kritvit blank	0666 03 1854022	1/5		4010337666035
 kritvit sidenmatt	0666 27 1851853	1/5		4010337666271
 antracit	0666 28 1851854	1/5		4010337666288
 alufärg	0666 26 1851852	1/5		4010337666264
 svart matt	0666 005	1/5		4010337036586
 grå matt	0666 015	1/5		4010337081401

Hänvisningar

- Genom att byta ut de båda bifogade symbolskivorna för markis och tid kan denna täckplatta användas universellt.

Leveransen innehåller

- Symbolskivor för jalusi (△, ▽) och tid (15 till 120 min eller 30 till 60 min) ingår i leveransen.
